POCKET ASSEMBLY

A. ASSEMBLING THE POCKET:

Align the pocket to the snaps of the pocket trim ring. Snap the pocket into place on the back of pocket trim ring.

NOTE: Do not remove any of the snaps on the pocket trim. Slide through the opening and the assembled pocket will snap on the kit panel.

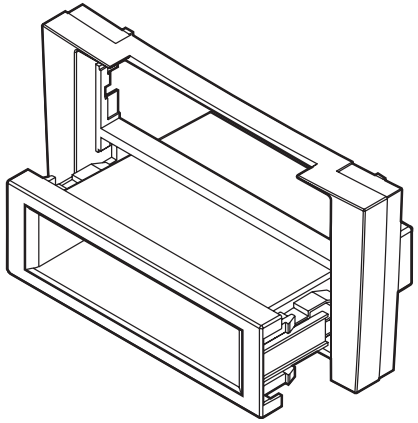

MOUNTING THE RADIO

DIN RADIOS:

The kit comes DIN ready. Following the instructions supplied with the radio, secure the radio to the mounting kit.

CAUTION:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE RADIO ADDS TO THE INSTALLATIONS STRUCTURAL INTEGRITY.

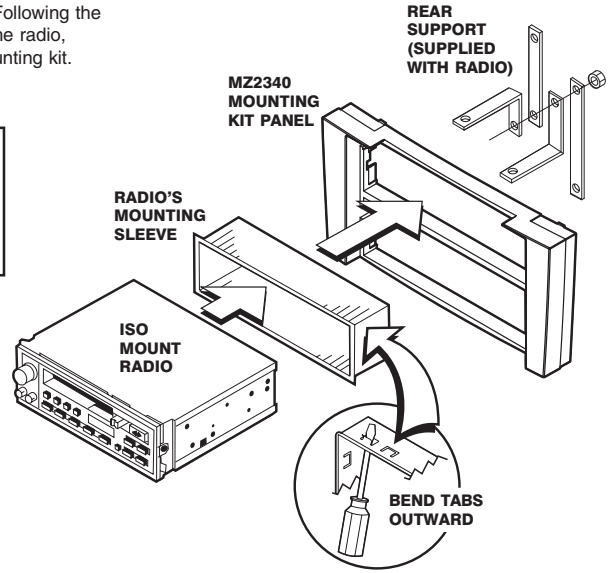

2003-UP MERCEDES-BENZ E CLASS

RADIO REMOVAL

INSTALLER NOTE: Take extra caution when unplugging fiber optic cables.

1. Set parking brake, unsnap shift lever trim bezel and place vehicle in DRIVE.
2. Unsnap cigarette lighter/ashtray assembly, disconnect and remove.
3. Extract (2) T-20 torx head screws from ashtray location.
4. Lift away emergency/hazard light module, disconnect and remove.
5. Extract (2) T-20 torx head screws from bottom front of radio/control unit (facing upwards).
6. Lift radio/control unit from dash unplug and remove.

SCOSCHE®

MZ2345

IN-DASH INSTALLATION KIT FOR 2003-UP MERCEDES-BENZ E CLASS

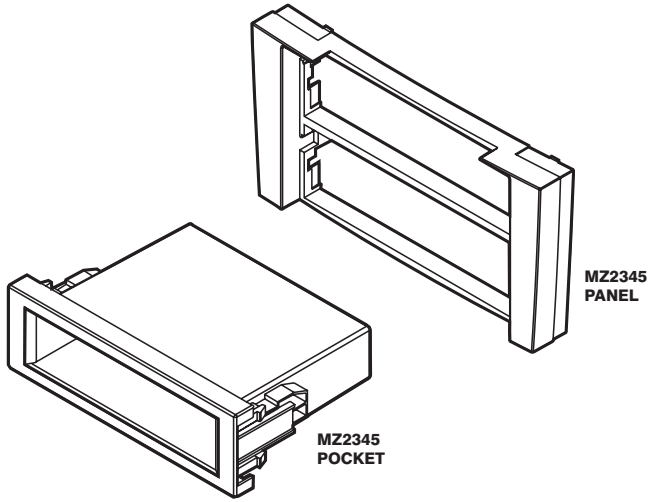

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche MZ2345 Kit. This kit was manufactured with the highest of quality standards.

CAUTION:

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (MZ2345) in 2003-up Mercedes-Benz E320 Coupe Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

© 2005 SCOSCHE INDUSTRIES, INC.

SI 8/05-MZ2345 (3000003)